


BOX ASSEMBLY INSTRUCTIONS

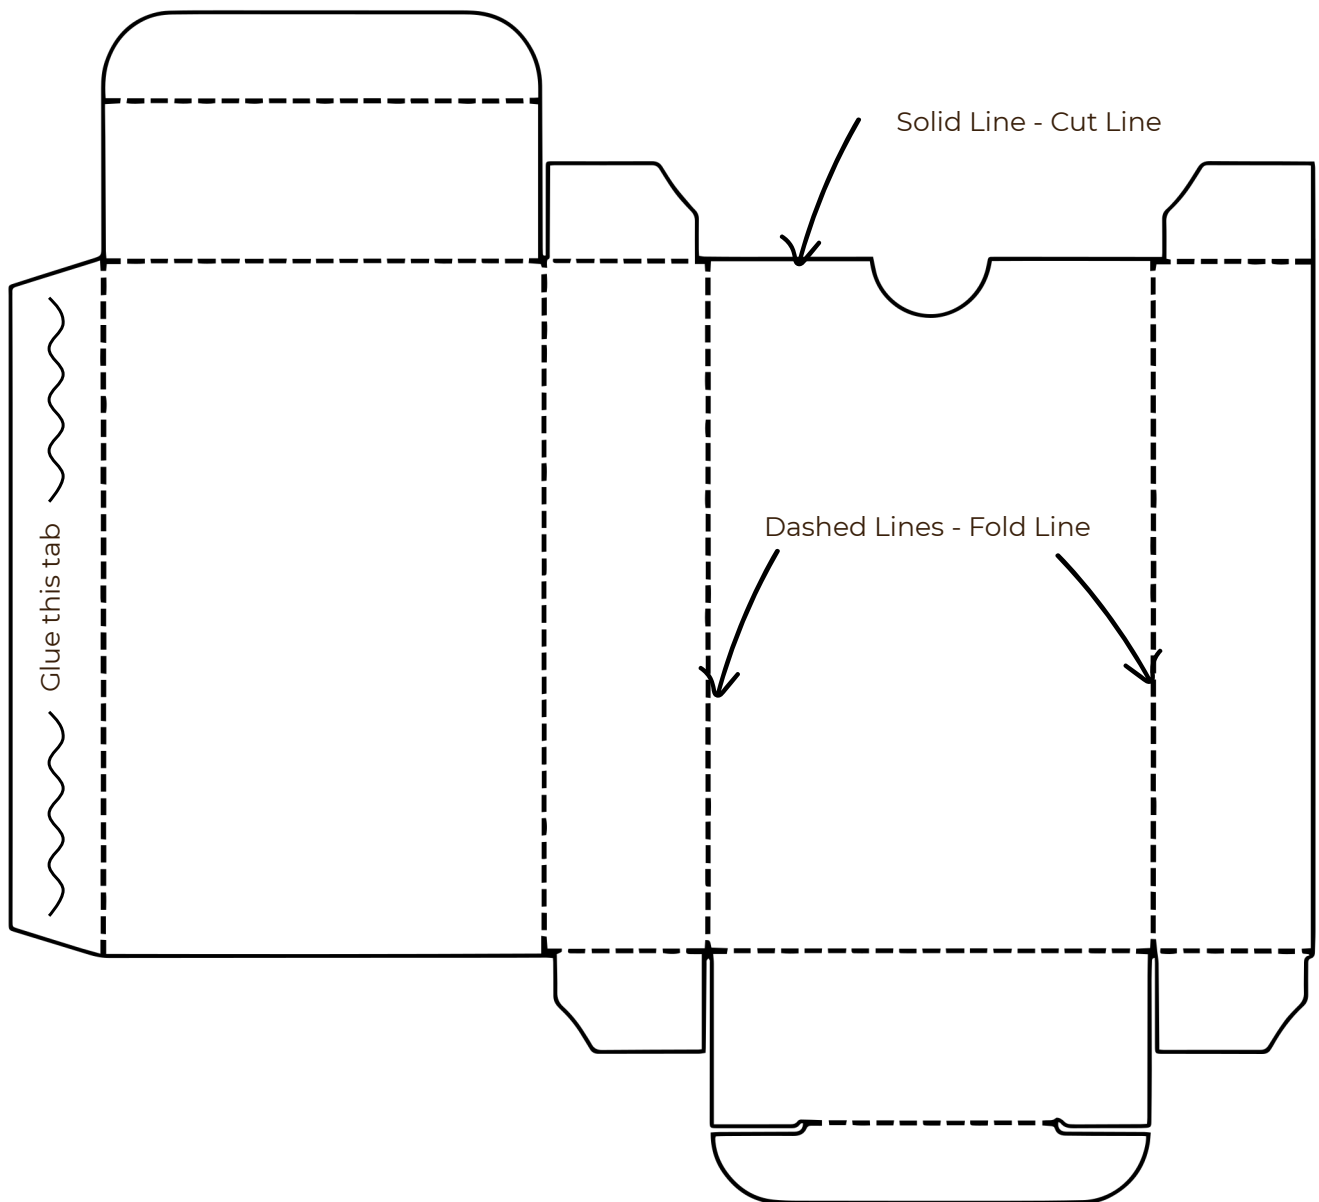

1. PRINT YOUR BOX TEMPLATE

Print the box template onto thick card or cardstock.

For best results, use 250gsm–300gsm card.

Make sure your printer is set to: **Actual Size / 100% Scale**

Do not use “fit to page”, as this may change the size of the box.

2. CUT AROUND THE OUTSIDE EDGE

Carefully cut around the outer solid line of the box template.

Take your time around the corners and tabs.

Do not cut along the fold lines (dashed)

3. SCORE THE FOLD LINES

Before folding, gently score along all fold lines using a ruler and a scoring tool.

If you do not have a scoring tool, you can use:

- the back of a craft knife
- an empty ballpoint pen
- the edge of a ruler

Scoring helps the card fold neatly without cracking.

4. FOLD THE BOX SHAPE

Fold along each scored line.

Make sure all printed sides face outward.

Crease each fold firmly so the box keeps its shape.

You should now see the box starting to form.

5. APPLY GLUE OR TAPE TO THE TABS

Add glue or double-sided tape to the marked tabs.

Use a small amount of glue so it does not spill out around the edges.

If using glue, allow a few seconds for it to become tacky before pressing the tabs into place.

6. BUILD THE BASE FIRST

Attach the side tabs to form the main box shape.

Press each glued section firmly and hold for a few seconds.

Check the corners are straight before the glue dries.

7. CLOSE THE BOTTOM

Fold in the bottom flaps.

Glue or tape them securely in place.

Press down from inside the box if needed to help the base stick flat.

8. ADD THE CARDS

Once the glue is dry, place your game cards inside the box.

Make sure the cards fit comfortably before closing the lid.

